

Using Windows Media Player 11 with BeoMaster 5/ BeoSound 5

This guide will instruct you on how to rip CDs directly onto your BeoMaster 5/BeoSound 5 using Windows Media Player.

You must have BeoPlayer/BeoConnect for Windows installed on your PC because BeoPlayer/BeoConnect acts as a connector between Windows Media Player and BeoMaster 5/ BeoSound 5.

Before you begin	<p>This Guide applies to the use of Windows Media Player 11 (and 12) with Windows XP with Service Pack 2, Windows Vista with Service Pack 1 or Windows 7.</p> <p>To use Windows Media Player 11 with BeoMaster 5/BeoSound 5, BeoPlayer 5.0/BeoConnect 1.0.4.0 or higher must be installed on the PC and BeoPlayer/BeoConnect must be connected to BeoMaster 5/BeoSound 5.</p>
How does it work?	<p>The ripped CDs will not be stored on your PC since you only use the programme to rip CDs to BeoMaster 5/BeoSound 5.</p> <p>Remember to check that your PC is connected to BeoMaster 5 /BeoSound 5 before you start to rip CDs. Otherwise, the music file will be saved in the default setting instead of on BeoMaster 5/BeoSound 5.</p> <p>If there is contact between BeoPlayer/BeoConnect and BeoMaster 5/ BeoSound 5, the Bang & Olufsen icon in the task bar at the bottom of the PC screen is black.</p>
Supported format	<p>The supported cover format is jpg. Embedded cover art is transferred with the music files to BeoMaster 5/BeoSound 5. The cover art should have a resolution of 512x512.</p>
What to do?	

Step 1

- Insert a CD
- Start Windows Media Player
- Select the tab 'Rip' to see the CD content




Step 2

- Click 'Rip' again – a dropdown menu appears
- Select 'More options'




Step 3

- In the 'Options' menu, select the tab 'Rip Music'
- Click 'Change' to change the standard placement for ripped music

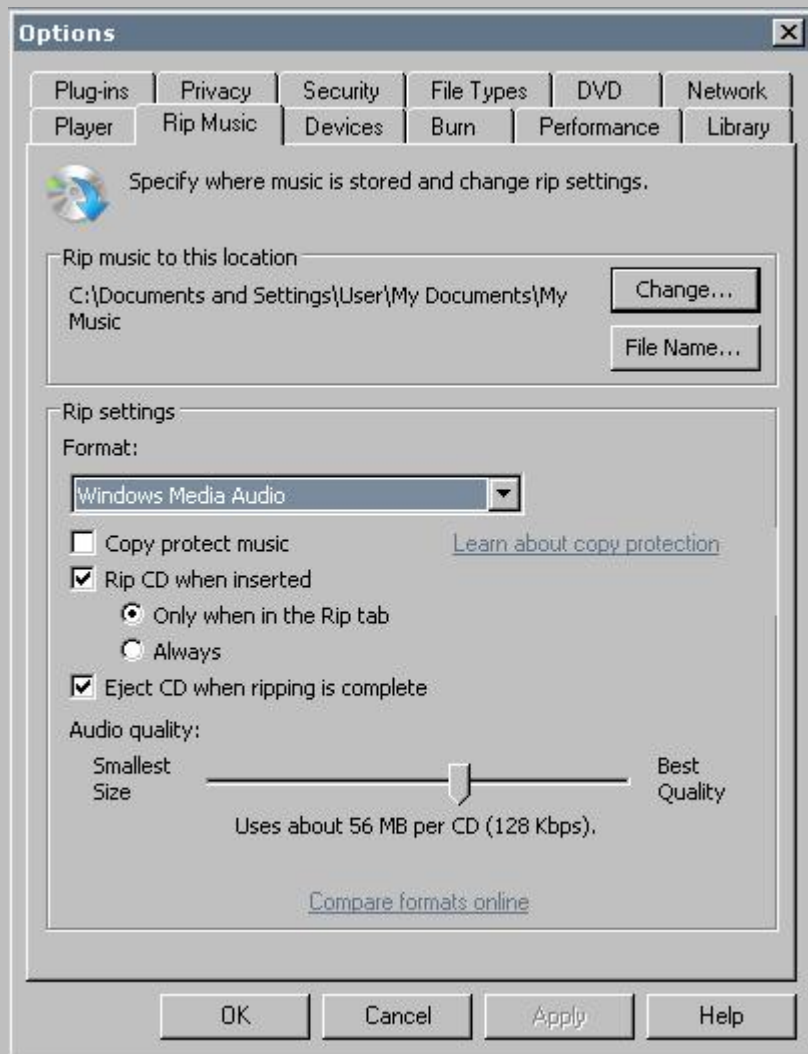


Step 4

- Start by expanding 'My Computer'
- Find the 'BM-Share' drive (this is the BeoMaster 5/ BeoSound 5 drive)

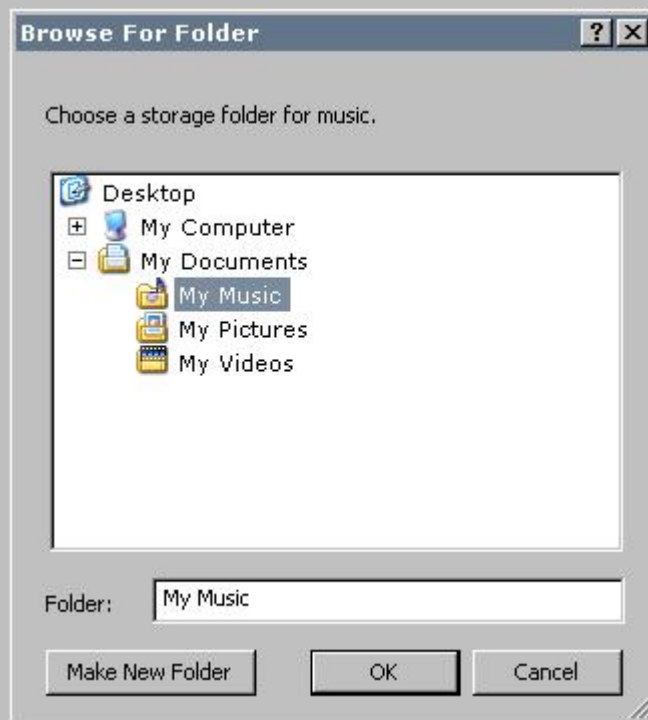

Step 5

- Expand the 'BM-Share' drive
- Select the folder 'Music' and click 'OK'

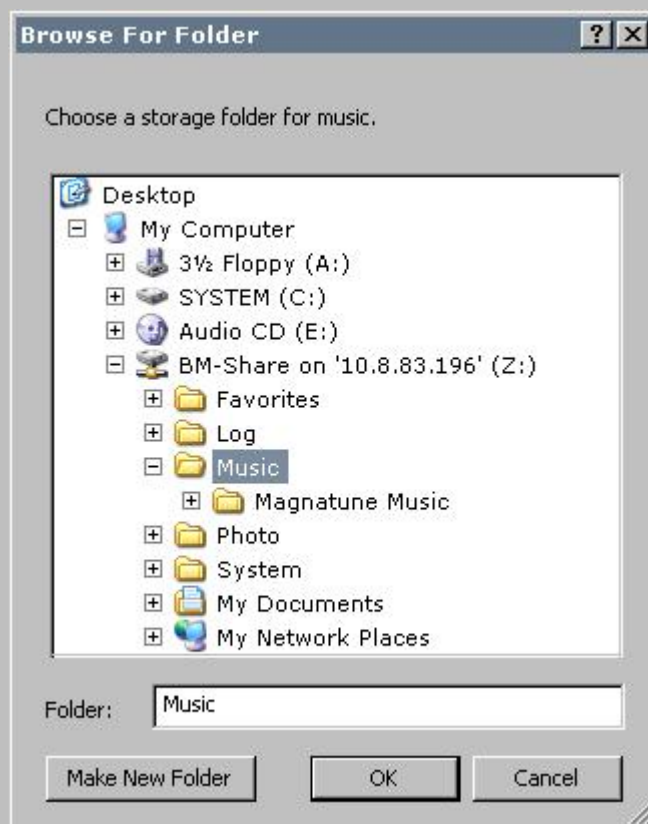

Step 6

The selected file location is now displayed.

 
Make sure the box 'Copy protect music' is NOT checked. Copy protected music cannot be played on BeoMaster 5/ BeoSound 5.

- Click 'OK'



Step 7

- Click the 'Start Rip' button located at the bottom of the screen



Using Windows Media Player 12

If you use Windows Media Player 12, the procedure is almost the same.

- The 'Rip Options' window is found by clicking on the CD icon in the list on the left side
- 'Rip Settings' is selected from the tool bar
- Click 'More Options' to select music location, etc.

